



PowerTel M6700 mobile phone

Operating
Instructions



Quick Start Guide	6
Quick Glance.....	6
What is in the box	8
Installing the SIM card and battery	8
Charging the battery	10
Charging via the mini USB charging socket	10
Battery status	11
Switching the mobile phone on and off	11
Setting the display language	12
Setting the time and date	12
Taking a call	13
Rejecting a call	13
Ending a call	13
Making a call	13
Advanced Settings and Functions	14
Questions and Answers	14

The phone in details	18
Keys and Parts	18
Special key functions	18
Icons in the display	22
Using the phone	24
General	24
Switching the mobile phone on and off	25
Dialling a phone number / Calling	26
Dialling with the speed dialling keys	26
Dialling with the one-touch dialling keys	26
Using redial / using the Calls list	27
Taking a call	27
Setting the volume	28
Hands-free	28
Options whilst in a call	28
3-party conference	29
"Phonebook" menu	30
Opening the phonebook	30
Checking the memory status	30

Creating a new phonebook entry.....	31
Calling from the phonebook.....	32
Editing a phonebook entry	32
Deleting a phonebook entry	32
Deleting all phonebook entries	33
Copying/moving all phonebook entries	33
Storing a phonebook entry to a speed dialling key	33
Storing a phonebook entry to an one-touch dialling key	34
“Messages” menu	37
Messages menu	37
Checking/changing the SMS centre number and the Voicemail server number	38
Writing and sending a SMS.....	39
SMS-Settings.....	41
“Call center” menu.....	42
Reading the calls list.....	42
Deleting the calls list.....	43
Call settings	44

"Settings" menu	49
User profiles	49
Direct number.....	51
Tone control	51
Phone settings.....	52
Network settings	54
Security settings.....	54
Bluetooth.....	55
Restore factory settings.....	57
"SOS" menu	58
Selecting an emergency call destination	58
Entering emergency call numbers.....	58
Select an outgoing emergency voice message	59
Recording a personal emergency voice message	60
Emergency call procedure	61
Cancel the emergency call function.....	62
"Tools" menu	63
Calender	63
Alarm	63
Calculator	64

"Services" menu	65
Appendix	66
Technical data.....	66
Service hotline.....	67
Problems and solutions	67
Tips on the battery	70
Intended use	70
Areas of use	71
Safety Information	71
Power adapter plug	74
Disposal.....	74
Declaration of Conformity	76
Maintenance	76
Guarantee	77
Index	79
Menu tree	82


Quick Start Guide

Important: Before you start, please read the safety information on page 71.

Quick Glance

- | | |
|----------------------------------|---|
| 1 Display | 12 Mini-USB charging socket |
| 2 Direct call keys
M1, M2, M3 | 13 Volume up/Down |
| 3 Left soft key | 14 Torch |
| 4 Call key | 15 LED Charging/Low battery |
| 5 Keypad | 16 Headset socket (Headset not
supplied) |
| 6 Star key | 17 Emergency call switch |
| 7 Earpiece | 18 Battery cover |
| 8 Right soft key | 19 Loudspeaker |
| 9 End call key /
On/Off key | 20 Navigation key |
| 10 Microphone | |
| 11 Hash key | |

QUICK START GUIDE

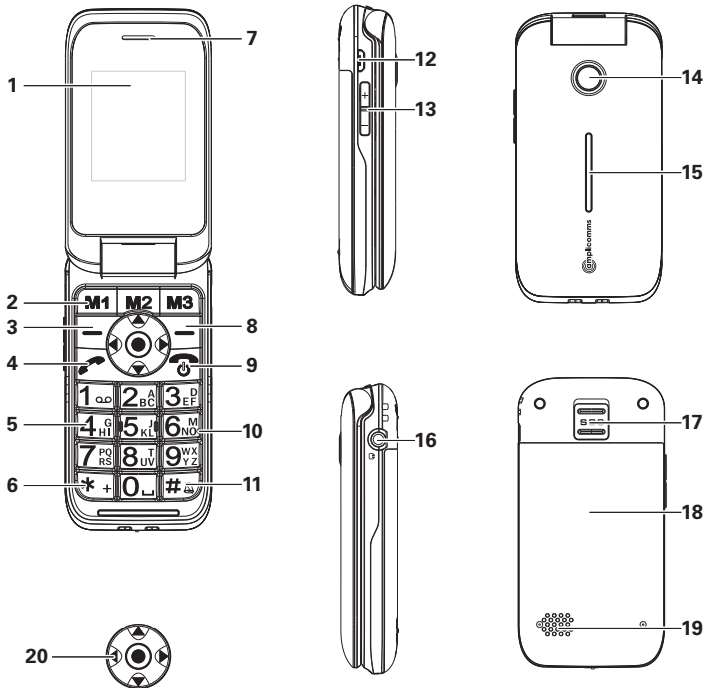

Helpline 0844 800 6503
 (See page 67 for costs and hours of operation)

What is in the box

1 mobile phone	1 power adapter plug
1 li-ion battery	1 operating manual

Installing the SIM card and battery

Risk of swallowing small objects!

The SIM card can be removed.


Small children can swallow them.

Pay attention that the SIM card is not bent or scratched. Prevent any contact with water, dirt or electrical charges.

Your telephone number is carried by the SIM card, not the phone. Therefore if you use a SIM card you had in a previous phone, you will keep the same phone number.

- Switch the phone off.
- Remove the battery cover by pressing on it in the area beneath the SOS key, slide it down and take it off.
- If there is already a battery inside, remove it.

- Slide the SIM card with the golden contacts facing down in the moulded SIM card holder. The SIM card must be located under the metal retaining bar to be in the correct position.

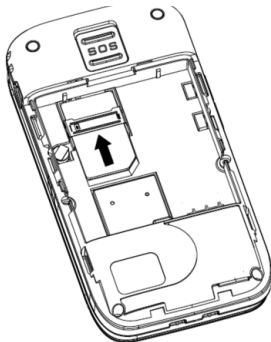

- Insert the battery. The golden contacts on the battery must face towards the bottom right. Press lightly on the top end of the battery until it snaps into place.
- Replace the battery cover on the back of the phone and shift it upwards until it clicks into place.

Charging the battery

- Before starting to charge the battery, check that it has been installed properly. Do not remove the battery while it is being charged. This could damage the phone.
- When charging the battery for the first time, it should be charged for at least 4 hours. Some batteries only reach their full capacity after several complete charge/discharge cycles.

Charging via the mini USB charging socket

- Plug the power adapter in the mini USB charging socket.
- Connect the power adapter plug. For safety reasons, only use the power adapter plug supplied.
- It may take a few seconds before the phone indicates the charging process.

Battery status

The current battery charge status is indicated in the display as follows:



Full --> --> --> --> --> --> --> Empty

When the battery charge is low, a corresponding warning message appears in the display. Charge the battery.

When the battery charge drops below the minimum status, the phone switches off automatically.

Switching the mobile phone on and off



3 sec. Switch the mobile phone on.



3 sec. Switch the mobile phone off.

Note: Some SIM cards will require you to enter a PIN code. Follow the prompts on the screen.

The SIM code (PIN of the SIM card) that you received with your SIM card, protects the SIM card against unauthorised use. The PIN2 code supplied with some SIM cards, you need to access certain services. If you enter the PIN or PIN2 code incorrectly three times in a row, you will be prompted to enter the PUK or PUK2 code. Check with your provider if you do not know these codes.

Setting the display language

If you want to select a different language please refer to the **Settings** menu, starting on page 49.

Setting the time and date

Refer to the **Settings** menu, starting on page 49.



Taking a call



Take the call

Rejecting a call



Reject the call

Ending a call



End the call

Making a call

Enter the phone number

Clear

Delete the last digit if incorrect



Dial the phone number

Advanced Settings and Functions

For more details about setting up your Amplicomms M6700 and other functions follow the descriptions in this user guide.

Examples:

- Set your one-touch dialling keys -> page 34.
- Store numbers in the phone book -> page 31.

Questions and Answers

In the majority of cases your M6700 phone is supplied without a SIM card. You may find the following “Questions and Answers” (Q & A) helpful.

Why hasn't the mobile phone been supplied with a SIM card?

Many people already have a mobile phone and wish to transfer their existing SIM card over to the new phone. This has the advantage of keeping the same telephone number and if the card is subscribed to a Pay-as-you-go service then you also

benefit from being able to carry over any credit that has been paid on the card.

Where can I get a SIM card from?

Any high street mobile phone shop will be able to provide you with a SIM card. Some of the major supermarket chains also provide mobile phone services and can supply a SIM card. A useful tip when choosing a SIM card / service provider however is to make sure that you have adequate signal coverage at home; this is particularly important if you live in a very rural area.

Why doesn't the mobile phone have a telephone number?

The telephone number is supplied by the service provider and will be registered onto the SIM card.

Can I use the SIM card from my old mobile phone?

Yes, usually you can transfer the SIM card over. However, some old SIM cards are not compatible with the Amplicomms mobile phone as they are from an earlier generation of SIM card design.

Can I use a SIM card from any mobile phone company?

Yes. The Amplicomms mobile phone is what is termed as an open SIM card phone and so it is not restricted to any particular service provider or mobile phone company.

How do I pay for my calls?

There are two main types of registration with a service provider or mobile phone company. One is a contract – this is where you sign up for an agreed contract over several months / year and pay an agreed monthly fee. This is more suited to people who are using their mobile phone as part of their job for example. The other is Pay-as-you-go, sometimes abbrevi-

ated to PAYG. With this type of service you add credit to the card and top up as and when required. Topping up the card is easy, you can do this over the phone, on-line, at many shops and even some cash points allow you to do this. PAYG is more suited to less frequent users.

How do I find out my credit balance?

The service provider of the SIM card should have provided an information pack with the card. This will give details of a short number to dial in order to check your balance. These access codes differ between mobile phone companies so please check the details specific to your service provider. Key in your number, press the talk button and the credit balance will be announced to you.

The phone in details

Keys and Parts

For the explanation of keys and parts please refer to page 6.

Special key functions

Left softkey

In standby -> open the main menu

In menus the function changes due to the term in the display above the softkey (e. g. **OK**).

Right softkey

In standby -> open the phonebook

In menus the function changes due to the term in the display above the softkey (e. g. **Back**).

Direct call keys

M1, M2, M3 - pressing one of these keys dials the assigned phone number. A phonebook entry can be assigned to each one-touch dialling key (refer to "Storing a phonebook entry to a one-



touch dialling key“ page 34). **Note:** Since this operation only requires a short press of a button, it could lead to unintentional dialling.

Call key

- Take a call or dial a number.
- Open the call list and the redial list

End call key

- End or reject a call
- Cancel the current process and return to standby (in menus)
- Switch the mobile phone on and off

Navigation key

Navigate through the menu.

In standby the up/down key offers a quick access to specific menu items.

- ▲ - Shortcuts: Quick access to important settings.
- ▼ - Alarm: Setting an alarm time.
- ◀ - User profiles: Activation/
Customisation of a user profile.



- - Messages menu
- ⦿ - Red button in the centre of the navigation key
In menus: function “OK”.
In standby (press and hold for approx. 3 seconds): switching the torch on/off.

Digit key 0

In idle mode, long press (approx. 3 s) to toggle the tone control setting between “Low frequency”, “High frequency” and “Normal frequency”. (See page 51 for explanation of tone control).

Digit key 1

Long press (approx. 3 s) dials the number to access your voice mail messages (to change the number, please refer to page 39).

Note: If prompted, it may be necessary



to enter your network's voice mail number first. Refer to the documentation supplied with your SIM card for this number.

Star key

- In pre-dialling mode: long press to enter the international prefix “+” or to enter P (pause)/ W (wait) (may be necessary for call-through numbers or remote accessing an answering machine).

- when entering text: open the special character table.

Hash key

- In standby: long press (3 seconds): to switch between ringer off (Silent mode) and ringer on (General activated).

- when entering text: toggles between case and numbers.



THE PHONE IN DETAILS

Volume control

+/- keys: - In standby: adjusts the volume level of the key tone
- Whilst on a call -> adjusts the ear-piece or Hands-free volume.

SOS switch

Start the SOS sequence. For details please refer to page 61.

Icons in the display



Signal strength of the phone's connection



Battery capacity (refer to page 11)



New SMS



New call



Call forwarding active



Alarm is activated



Profile "Outdoor" or "General" is activated



Profile “Meeting” is activated



Profile “Silent” is activated



A headset is connected



Bluetooth is activated



The “Roaming” symbol will appear if the phone switches to an alternate network provider. This may occur for example when entering another country. The Roaming facility depends on your network provider. Call your network provider if you have any queries regarding this service.

Using the phone

General

All the functions can be accessed via the various menus.

- Use the up/down key ▲ /▼ to scroll though the menus and the lists (e. g. phonebook).
- Press **Back**, to return to the last step.
- Press **OK** or **Select** to get to the next step.
- When entering text (e. g. phonebook or SMS) use the # key to toggle between uppercase letters (ABC), lowercase letters (abc) or numbers (123).

Use the star key to open the special character table.

- In order to enter text in **Multitap** mode, press the key labelled with the corresponding letter/character. If the first character of the group is required, press the key once. If the second character is required, press it twice, and so on. To enter two characters assigned to the same key, press the key the respective number of times to



enter the first character. Then wait for approx. 2 sec. and enter the second letter.

- Use the navigation key ▲ /▼/ ◀/▶ to place the cursor and press **Delete** for deleting characters.

Important Note: If the display light turns off, any keystroke activates only the light again. You must press the desired button a second time to perform the function.

Switching the mobile phone on and off

Switch off: Press and hold the red end call key. After a few seconds the telephone will be switched off.

Switch on: Press and hold the red end call key until the display light will be switched on. Enter the PIN code for your SIM card and press **OK**. Entering the PIN code is not required if this feature is switched off for your SIM card (refer to page 54 “SIM security” / not available for every provider).

Dialling a phone number / Calling

- The phone must be in standby (SIM card inserted and the phone switched on).
- Enter the telephone number incl. the prefix. For entering a + in front of the country prefix press * quickly two times.
- Press the green call key to dial the phone number.
- Press the red end call key for ending the call.

Dialling with the speed dialling keys

- Make sure, a phone number is assigned to the respective key. Press the desired digit key for approx. 3 seconds. Each stored number is dialled. To program the speed dialling keys see "Storing a phonebook entry to a speed dialling key," page 33.

Dialling with the one-touch dialling keys

- Make sure, a phone number is assigned to the respective key. Press the desired one-touch dialling key. Each stored number is dialled. To program the one-touch dialling keys



see "Storing a phonebook entry to an one-touch dialling key," page 34.

Using redial / using the Calls list

- In standby press the green call key. A list of the last calls is shown (Missed calls, dialled calls, received calls). Select an entry using the up/down key ▲ /▼.
- Press the green call key to dial the selected phone number.

Taking a call

- If your phone is ringing press the green call key.
 - Press the red end call key to reject the call. The caller gets the busy tone (depending on your provider).
Use the right softkey to switch off the ring tone ("Silent"). After this you can reject the call by pressing the right softkey ("Reject").
Pressing the left softkey or the green call key you can answer the call.

Setting the volume

- During a call you can set the volume using the + / - keys on the right hand side of the phone. The setting will be saved.

Hands-free

- During a call press **H-Free**. You can hear the caller via the loudspeaker.
- For switching off press **H-Held**. The loudspeaker will be switched off.

Options whilst in a call

You can select the following **Options** with the left softkey:

- **Hold** -> The call is put on hold. To retrieve the call press **Options/Retrieve**
- **End single call** -> End the call (same as end call key).
- **Phonebook** -> Open the phonebook.
- **Call history** -> Open the call history.
- **Messages** -> Open the messages menu.



- **Mute** -> Mutes the microphone. For unmuting press **Options** again and select **Unmute**.

3-party conference

“3-party” is a provider dependant feature. Establishing a 3-party conference lets you talk to two subscribers simultaneously.

- Call the first subscriber.
- Enter the phone number for the second subscriber and press the green call key.
or
press **Options** -> **Phonebook** or **Call history** to select an entry. Press **Options** and select **Call** - **OK**.
- When the second subscriber answers, press **Options** and select **Conference** - **OK** to establish the 3-party conference. Press **Options** -> **Switch** to toggle between the two subscribers.

"Phonebook" menu

You can save names and phone numbers in the internal memory (up to 100 entries) and on the SIM card.

Opening the phonebook

- In standby press **Names**
- or
- During a call press **Options** and select **Phonebook**.

Checking the memory status

For checking how many names and phone numbers are stored in the phonebook press **Names** -> **Options** -> **Phonebook settings** -> **Memory status**. The status of the SIM and phone memory is displayed.

Creating a new phonebook entry

- Press **Names** and select **Add new contact** using the navigation key ▲.
- Press **Options** and select **Select**.
- Depending on your preferences (Phonebook settings -> Preferred storage) the new contact is stored to the phone or to the SIM card.
- Mark the input area under **Name** and press **Options** -> **Edit**. Enter the name and press **Options** -> **Done**.
- Mark the input area under **Number** and press **Options** -> **Edit**. Enter the telephone number and press **Options** -> **Done**.
- For storing the new entry press **Options** -> **Save**.

Calling from the phonebook

- Press **Names** to open the phonebook.
- Select an entry using the navigation keys ▲ /▼ or enter the first letter for the entry.
- Press the green call key to dial the phone number.

Editing a phonebook entry

- Press **Names** to open the phonebook.
- Select an entry, press **Options** and select **Edit**.
- Edit the entry.
- Press **Options** and select **Save**.

Deleting a phonebook entry

- Press **Names** to open the phonebook.
- Select an entry, press **Options** and select **Delete**. Press **Yes** in the following confirmation query.



Deleting all phonebook entries

- Press **Names -> Options -> Phonebook settings -> Delete all contacts**. Select whether the contacts in the phone or on the SIM card should be deleted and confirm.

Copying/moving all phonebook entries

- Press **Names -> Options -> Phonebook settings -> Copy contacts/Move contacts**. Select whether the contacts in the phone should be copied to the SIM card or vice-versa and confirm.

Storing a phonebook entry to a speed dialling key

- Press **Names -> Options -> Phonebook settings -> Speed dial**.
- Make sure that the feature Speed dial is switched on.

Note: When you see "Off" below status press OK, select "On" and press OK.

"PHONEBOOK" MENU

- Select **Set numbers** and press **OK**.
- Select a button from the list (2...9) and press **Edit**.
- Select an entry and press **OK**.

Storing a phonebook entry to an one-touch dialling key

- Press **Menu** -> **Settings** -> **Direct Number** -> **OK**
 - Select a direct call key (**M1**, **M2**, **M3**) and press **OK**.
 - Change the name for the key if necessary (**Options** -> **Edit**) and press ▼.
 - Press **Options** -> **Add from phonebook** -> **OK**, select an entry and press **OK**.
- or
- Press **Options** -> **Enter number** -> **OK**, enter a phone number and press **OK**.

Note: To edit or delete the entry press Options -> Edit or Remove.

Further options

With the phonebook open and an entry selected press **Options** and select one of the following options:

- **View:** The entry is shown
- **Send text message:** Send a SMS to the respective phone number.
- **Call:** call the telephone number
- **Edit:** You can edit the entry.
- **Delete:** The entry will be deleted.
- **Copy:** You can copy the entry to the telephone or to the SIM card.
- **Send business card:** You can send the contact data via SMS or Bluetooth.
- **Add to block list:** The entry will be added to the block list.
- **Phonebook settings**
 - **Preferred storage:** select where new contacts should be saved (SIM card, Phone, Both).

- **Speed dial:** switch on the function and edit speed dialing keys
- **Extra numbers:** enter a phone number for fixed dial.
- **Human voice prompt:** the telephone number of the selected entry will be announced.
- **Memory status:** shows the used entries on the SIM card and in the phone.
- **Copy contacts:** to copy all contacts from the SIM card to the phone or vice-versa.
- **Move contacts:** to move all contacts from the SIM card to the phone or vice-versa.
- **Delete all contacts:** to delete all contacts.



"Messages" menu

You can send and receive text messages (SMS / Short Message Service). Unread text messages are stored in the Inbox. When a new SMS is received, a message appears on the display.

If the memory is full, you will receive a message. To receive new messages you will have to delete old messages.

Messages menu

Press **Menu** -> **Messages**. You will have the following options:

- **Write message:** To write a new SMS.
- **Inbox:** Open the list of received SMS.
- **Drafts:** Open the draft list.
- **Outbox:** Open the list of SMS still to be sent.
- **Sent messages:** Open the list of already sent SMS.
- **SMS settings:** You can change some of the SMS related parameters.

Note: These settings should only be changed by advanced users.

Checking/changing the SMS centre number and the Voicemail server number

This particular SMS centre number is needed for sending and receiving of SMS. It is stored on the SIM card correctly. In certain cases it is necessary to check that number or to change it.

- Press **Menu**, select **Messages** -> **SMS settings** -> **SIM**.
- You have the following options.
 - **SMSC address:** (the phone number for your provider's SMS centre. In case of any question please contact your network provider.)
If necessary delete the phone number with **Clear**, enter a new number using the digit keys and press **OK**.
 - **Delivery report:** You can request a delivery report of sent SMS (depending on network provider).
 - **Reply path:** Please let the setting **Off** untouched in the M6700.

- **Voicemail server:** You can change the number of your voicemail server. In case of any question please contact your network provider.

Writing and sending a SMS

- Press **Menu**, select **Messages** -> **Write message**.
- Write your SMS using the digit keys. For more information for entering text refer to chapter "Using the phone / General", page 24.
- After having entered the text press **Options** and select **Send to**.
- Select **Enter number**, enter the phone number including the prefix and press **OK**.
- The entered phone number will be shown.
- Press **Options** and select **Send**.

or

"MESSAGES" MENU

- Select **Add from Phonebook**, select an entry and press **OK**.
- The selected entry will be shown.
- Press **Options** and select **Send**.

Note: If you select **"Save"** instead of **"Send"** the message will be stored to the **"Drafts"** directory for further access.

Reading/deleting SMS and further options

- Press **Menu**, select **Messages-> Inbox**.
- Select a message.
- Press **Options -> View** to read the message.
- Press **Options** and select from the following options:
 - **Reply:** Reply to the number from which the text was sent.
 - **Call sender:** Call the sender on the phone.
 - **Forward:** Forward the text to a different number.



- **Delete:** Delete the SMS text.
- **Advanced**
 - **Use number:** You can make a call to the sender, store the number in the phonebook or send a SMS to the number.
 - **Use USSD:** If the SMS contains an USSD code it is extracted and you can use this.

SMS-Settings

- Press **Menu**, select **Messages-> SMS settings**.
- You have the following options.
 - **SIM:** (refer to "Checking/changing the SMS centre number and the Voicemail server number").
 - **Save sent messages:** select whether the sent SMS should be saved.

"Call center" menu

A new call is shown on the display.

- Press **Back** to delete the message. The icon for a new call appears in the display. You can see this call "normally" in the **Missed calls** list.
- Press **View**, to read the caller's name and number.
- Press **Options**. For further options please refer to the following chapter.

Reading the calls list

- Press **Menu**, select **Call center** -> **Call history**.
- Select **Missed calls**, **Dialled calls** or **Received calls**.
- Select an entry, press **Options** and select one of the following options:
 - **View**: Read the details.
 - **Call**: Call the telephone number.
 - **Send text message**: Send a SMS to the phone number.

- **Save to Phonebook:** You can store the telephone number to the phonebook (this item will only be shown if there exists no entry for this number).
- **Add to Blocklist:** Add the entry to the block list.
- **Delete:** Delete the entry.

Deleting the calls list

- Press **Menu**, select **Call center** -> **Call history**.
- Select **Delete call logs**.
- Select a list to delete **Dialled calls**, **Missed calls**, **Received calls** or **All calls** and press **OK**. Press **Yes** in the following confirmation query.

Call settings

- After pressing **Menu** -> **Call center** -> **Call settings** you have the following options:
 - **Call waiting:** Settings for an incoming call if you are already in a conversation.
 - **Activate:** The second call will generate a short beep in the earpiece.
 - **Deactivate:** The second caller will get the busy tone.
 - **Query status:** Information on the current setting.
 - **Call divert:** Settings for call diversion.
 - **Divert all voice calls:** You can **Activate** a call diversion for all voice calls (select **To new number** and enter subsequently a destination or select **To voice-mail**, if you want to divert to your voice mail box), **deactivate** a diversion or get information on the current setting with **Query status**.



- **Divert if unreachable:** Call diversion, if your phone is not available (switched off or "No network"). For information on settings please refer to "Divert all voice calls".
- **Divert if no answer:** Call diversion, if you do not accept the call. For information on settings please refer to "Divert all voice calls".
- **Divert if busy:** Call diversion, if your phone is busy. For information on settings please refer to "Divert all voice calls".
- **Divert all data calls:** Diversion for all "No voice" calls. For information on settings please refer to "Divert all voice calls".
- **Cancel all diverts:** To cancel all call diversions.

- **Call barring:** Barring of incoming or outgoing calls. Ask your provider for the barring password. You can change it to a personal password (-> Change barring password).
 - **Outgoing calls:** If you select **All voice calls**, no more calls can be dialled. If you select **International voice calls**, no more calls to networks abroad can be dialled. If you select **International voice calls except to home**, only calls to your home country can be made.
 - **Incoming calls:** If you activate **All voice calls** no more calls will be signalled - You are not available. The setting **Voice calls when roaming** bars all incoming calls, if you are not in your home land (e. g. abroad on vacation).
 - **Cancel all:** Cancel all barrings.

- **Change barring password:** Changing the password for activating/deactivating the call barring. Ask your provider for the barring password.
- **Advance settings:**
 - **Block list:** You can enter a list of phone numbers to be blocked. If you activate this feature calls from phones with the respective numbers will not be signalled any more.
 - **Auto redial:** If the function is activated, phone numbers that were "busy," will be redialled automatically (interval 5 min, max. 5 attempts).
 - **Call time reminder:** You can specify whether you want to be alerted during a call by a beep in the earpiece after a certain time of call duration.
For **Single** you can set a time up to 3000 sec (= 50 min), for **Periodic** you can set up a time between 30 and 60 s.

- **Answer mode:** With the setting **Flap answer** activated an incoming call will be taken by opening the cover. If **Any key** is activated, incoming calls can be taken by any key (except the right softkey and the red end call key).

If **Auto answer when headset mode** is activated, an incoming call will be taken automatically if a headset is connected.

If no option is activated an incoming call can only be taken with the green call key.



"Settings" menu

User profiles

You can store different profiles (special settings dependent on user and surroundings), which you can switch quickly.

- Press **Menu**, select **Settings** -> **Profiles** and press **OK**.
- Select one of the profiles and press **Options**.
- You have the following options:
 - **Activate:** The profile with the respective settings is activated.
 - **Customize:** Change the settings for the respective profile. The "Silent" profile can not be changed.
 - **Alert type:** Select whether an incoming call should be signalled by **Ring only**, **Vib. only**, **Tone and Vib.** or **Vib. then ring** (Vib. = vibration).
 - **Ring type:** You can select **Beep once** or **Repeat**.
 - **Ringtone** - Set the ring tone for incoming calls
 - **Ringtone volume:** Select the volume for the ring tone.

"SETTINGS" MENU

- **Message** - Set the tone for an incoming message.
- **Message volume:** Select the volume for the incoming message tone.
- **Keypad** - Select whether the confirmation of a pressed button should be confirmed with a **Click**, a **Tone**, **Human voice tone** (with a voice prompt when entering a digit) or **Silent**.
- **Keytone volume:** Select the volume for the keytone.
- **Power on** - Set the tone for powering on the phone.
- **Power off** - Set the tone for powering off the phone.
- **Flap open** - Set the tone for opening the phone's cover.
- **Flap close** - Set the tone for closing the phone's cover.
- **System alert** - Switch the sound on/off for system notifications.

The new settings will only take effect if you press **Options** again and select **Save**, once the modifications are done.



Direct number

You can assign important phone numbers to the one-touch dialling keys M1, M2 and M3.

- Press **Menu**, select **Settings** -> **Direct Number**.
- Select a one-touch dialling key and press **OK**.
- Press **Options** and change the name if necessary (max. 9 characters) and press **Options** -> **Done**.
- Go to the entry field for the number and press **Options** -> **Add from Phonebook**, select a telephone number or select **Enter number** and enter the phone number manually.

Tone control

Set the tone for the earpiece/loudspeaker.

- Press **Menu**, select **Settings** -> **Tone control** and press **OK**.
- Select **Normal frequency**, **Low frequency** (increases the lower frequencies) or **High frequency** (increases the higher frequencies) and press **OK**.

Phone settings

- Press **Menu**, select **Settings** -> **Phone settings** and press **OK**.
- You have the following options:
 - **Time and date:** In this menu you can **Set time/date** and **Set format** (time 24/12h / date (DD MM YYYY/ MM DD YYYY / YYYY MM DD)).
 - **Language:** Select a language for the display.
 - **Pref. input method:** Select which setting you prefer for entering text (phonebook entries/SMS).
 - **Display**
 - **Show date and time:** Select whether the date and time should be shown in the idle display or not.
 - **Dedicated key:** You can assign quick access for some menus to the navigation key **▲ /▼/◀/▶**. Pressing the respective key in standby opens the assigned menu directly.



- Select a key (**Up**, **Down**, **Left** or **Right**), press **Edit** and select a function from the list. Press **OK** to save.
- **Flight mode:** Switch the flight mode on/off.
- **Backlight settings**
 - **Main LCD backlight:** Set the brightness and the duration for the backlight.
 - **Incoming and SMS LED:** Select whether the indicator LED for incoming calls and SMS should be always active (On), between 8 pm and 8 am off (Night mode) or always deactivated (Off).
 - **Charge LED:** Select whether the indicator LED for charging should be always active (On), between 8 pm and 8 am off (Night mode) or always deactivated (Off).

Network settings

- Press **Menu**, select **Settings** -> **Network settings**.
 - **Network selection** Select whether the network selection should be automatic or manual. When **Automatic** is selected the phone tries to connect to your SIM card's provider.

Security settings

- Press **Menu**, select **Settings** -> **Security settings**.
- You have the following options:
 - **SIM security**
 - **PIN lock:** You can turn on or off the request for the SIM PIN when the phone is switched on. This is not allowed for some SIM cards/providers.
 - **Change PIN:** You can change the SIM card PIN.
 - **Change PIN2:** You can change the PIN2 für the SIM card.



- **Screen auto lock:** When the automatic keylock is switched on, the keypad will be locked after a preset time (15 s, 30 s, 1 min, 5 min) after the last time a key was pressed.
- **Phone security**
 - **Phone lock:** Entering the phone lock code you can lock the phone (0000 in delivery state).
 - **Change password:** You can change the phone lock code (0000 in delivery state).

Bluetooth

- Press **Menu**, select **Settings** -> **Bluetooth** and press **OK**.
- You have the following options:
 - **Power:** Switching the function on or off. You can change the setting with the left softkey.
 - **Visibility:** Select whether your phone is visible for other Bluetooth devices when the Bluetooth function is activated. You can change the setting with the left softkey.

- **My device:** For connecting the phone to another Bluetooth device with audio profile (e. g. headset or car kit). Previously the "Search new device" and the "pairing" with the device has to be carried out. After selecting the device and **Options** you have the following options:
 - **Connect** (with the paired device)
 - **Service list**
 - **Rename**
 - **Delete**
 - **Delete all**
- **My name:** The Bluetooth name. Can be changed.



Restore factory settings

You can reset the phone to its factory settings.

- Press **Menu**, select **Settings** -> **Restore settings** and press **OK**.
- Enter the phone password (1122 in delivery state) and press **OK**.
- Press **Yes** in the following confirmation query.

Note: The contacts stored in the phone will not be deleted.

"SOS" menu

This phone is equipped with an emergency call function. You can register up to 5 personal phone numbers for automatic periodic dialling or an emergency phone number for an emergency call centre.

Selecting an emergency call destination

- Press **Menu**, select **SOS** -> **SOS mode setting**.
- Select **Set 5 numbers**, if you want to call up to five personal emergency call numbers (see below) or **Set call center**, if you want to call an emergency call centre. Select **Off** for deactivating the emergency call function.

Entering emergency call numbers

- Press **Menu**, select **SOS**.
- Select **Set SOS numbers**, select one of the 5 possible entries and press **Edit**.
- Select **Add from phonebook**, to select a phone number

from the phonebook or **Edit number**, to enter the phone number manually.

or

- Select **Call center number** and enter the desired phone number.

Note: It is forbidden to enter a public emergency number such as police, fire and rescue control centre. It is a purely "private" emergency call.

Select an outgoing emergency voice message

- Press **Menu**, select **SOS** -> **Set outgoing voice MSG**.
- Select **Default**, to select the default outgoing voice message.

or

- Select **Custom**, to select a personal outgoing voice message. To use this setting you will have to record the personal outgoing message before (see below).

Recording a personal emergency voice message

- Press **Menu**, select **SOS** -> **Set outgoing voice MSG**.
- Select **Custom** and press **OK**.
- You have the following options:
 - **Select:** your personal emergency voice message will be sent (only possible, if a personal emergency voice message is already recorded).
 - **Record:** Speak your personal emergency voice message right to the phone's microphone. Press **Stop** to stop recording. Your personal emergency voice message will be stored.
 - **Play:** playback of your personal emergency voice message.
 - **Delete:** your personal emergency voice message will be deleted.

Emergency call procedure

Push the SOS switch on the rear side of the phone to the upper position - **SOS** is visible. When the automatic SOS call starts you will hear a siren tone.

When **"Set 5 numbers"** is set:

- The first phone number will be dialled.
- If the first phone number will not answer the next phone number will be dialled and so on. All phone numbers (max. 5) will be called one by one subsequently. If you have only set one phone number, the phone will only call that number cyclically. This procedure will be repeated as long as the phone's battery is not empty.

The procedure stops, as soon as the first person answers. The emergency voice message will be played. If the called party press **key "0"** within 10 seconds after your recorded voice playing ended, hands free mode will be activated at your side and you can talk to the called person directly.

- **Note: Please mention explicitly in your personal emergency message, that the called party will have to press key "0" to be able to speak with you. If not, the loop continues. This prevents the emergency loop from terminating, when, for example, an answering machine takes your emergency call.**
- **The emergency loop continues even after an answered emergency call, until you cancel the emergency (push emergency switch down again).**

Cancel the emergency call function

Push the SOS switch on the rear side of the phone in the lower position again.

"Tools" menu

Calendar

You can set the calendar from January 1970 to December 2030. With **Options** the following functions are available:

- Jump to date
- Go to today
- Go to weekly/monthly view

Alarm

You can set 5 different alarms, which will sound once, daily or only on certain days.

- Select an entry and press **Edit**.
- Under Status you can switch the alarm **On** or **Off** (Options - > Select).
- Enter the desired time.
- Select **Once**, **Everyday** or **Custom** (Options - Select, when ready: Options - Done).

- Select an alarm tone.
- Select with **Alert type** what kind of alarm should be given (Ring only / Vib. only / Tone and Vib.).
- To save your settings press **Options** -> **Save**.
- When the alarm goes off you can switch it off by pressing **Stop**.

Calculator

The phone can support four continuous mixed arithmetic operations.

- Enter the first digit(s) for your arithmetic operation. Enter the "dot" using the hash key.
- Press the navigation key **▲ / ▼ / ◀ / ▶** to select the operation sign (+ - x ÷).
- Enter the next digit(s)
- Press the button in the centre of the navigation key to carry out the operation.



"Services" menu

The items in this menu depend on your network operator.
Please check with your provider for details.

Appendix

Technical data

Dual-Band	GSM 900 / DCS 1800
Additional functions	Emergency call function, torch
Battery	Li-Ion, 3.7V, 900 mAh
Maximum earpiece volume	+24 dB (distortion < 5 %)
Talk time	up to 7 hours
Standby time	up to 8 days
Dimensions	101 x 51 x 21 mm (closed) 185 x 51 x 12 mm (open)
USB connection	Micro USB, EU Standard
Headset connection	3.5 mm jack, 4-conductor (TRRS) phone connector
SAR values	GSM 900 MHz 0.444 W/kg DCS 1800 MHz 0.867 W/kg



Service hotline

Should problems arise with the telephone, please refer to the following information first. In the event of technical problems, please contact our service hotline under tel. 0844 800 6503 (Using a UK landline, at the time of going to print: calls cost 6p for connection charge and then 5p a minute. Mobile costs may vary.) In the case of claims under the terms of guarantee, contact your sales outlet. There is a 2 year period of guarantee.

Problems and solutions

Problems

Remedy

The mobile phone cannot be switched on.

- No battery inserted.
- Battery is not charged.

The phone is requesting a PUK when I switch on the phone.

If you do not have the PUK for your SIM card then contact your service provider

No signal quality is displayed.

Keypad does not function or only functions very slowly.

A message appears in the display for some functions, indicating execution/use is not possible.

Screen frozen or no response when pressing keys.

No network connection. The mobile phone is in a location where there is no network service. Move to a different location or contact your service provider.

The operating speed of the display is reduced in the case of low temperatures. This is normal.

Some functions can only be used after the respective service has been applied for. Contact your service provider.

Remove the battery for 3 minutes and try again.

No connection to the mobile telecommunication network.

Contact your service provider.

The “Insert SIM” message appears in the display.

Ensure that the SIM card has been installed correctly. Contact your service provider, if necessary.

The battery cannot be charged or is empty within a short time.

- Battery is defective.
- Connect the charging unit properly.
- Charge the mobile for 4 hours.

Tips on the battery

- Only use batteries, cables and charging unit approved by the manufacturer, otherwise the battery could be damaged.
- Do not short circuit the battery. Always leave the battery in the phone to avoid accidentally short circuiting the battery contacts.
- Keep the battery contacts clean and free of dirt.
- The battery can be charged/discharged hundreds of times but its service life is limited. Replace the battery when the battery power has decreased noticeably.

Intended use

This mobile phone is designed for use when connected to a mobile phone network. Any other use is considered unintended use. Unauthorised modification or reconstruction is not permitted. Under no circumstances open the device or complete any repair work yourself.

Areas of use

- Do not use the phone in prohibited areas.
- Switch the phone off in the vicinity of medical equipment (e.g. in hospitals).
- Do not use the phone in petrol stations or near fuels and chemicals.
- Check with the airline whether mobile phones may be used on board.

Safety Information

- Prevent exposure to smoke, dust, vibration, chemicals, moisture, heat and direct sunlight. The phone is not water-proof; therefore, keep it dry.
- Only use original accessories and batteries. Never attempt to connect other products.
- If you want to connect the phone to another device, read the manual supplied with that device with regard to any detailed safety information.

- Never attempt to connect incompatible products.
- Repairs to this device may only be completed by qualified service personnel.
- All mobile communication equipment is subject to interference which may impair its performance.
- Keep the phone and accessories out of the reach of children.
- The SIM card can be removed. Caution! Small children can swallow them.
- The ringing tone is issued via the loudspeaker. Take an incoming call first and then hold the phone to your ear. This prevents any possible hearing damage.
- Only use the phone while driving or riding a transport vehicle in road traffic when using the approved handsfree equipment and appropriately positioned holders. Ensure that no safety-related functions are interfered with when operating the phone. It is essential to observe the applicable national laws and regulations.

- Always maintain a distance of at least 15 cm to implanted heart pacemakers to prevent any possible interference. If you have had a pacemaker implanted, do not carry the phone in a breast pocket when switched on. Always hold the phone to the ear furthest away from the pacemaker during calls.
Switch the phone off immediately if you notice or suspect any adverse effects.
- This phone is hearing aid compatible. If you wear a hearing aid, however, please contact your doctor or the hearing aid manufacturer to inquire about any possible impairments through mobile communication equipment.
- Do not rely on the mobile phone as a safeguard for emergencies. For a variety of technical reasons, it is not possible to guarantee a reliable connection under all circumstances.

Power adapter plug



- Energiesparend
- Economisant l'énergie
- A risparmio di energia
- Energy efficient

The power adapter plug supplied fulfils the ecodesign requirements of the European Community (Directive 2005/32/EC).

This means that the current consumption is considerably less, both in operation as well as in standby, in comparison to older power adapter plug models.

Disposal

In order to dispose of your device, take it to a collection point provided by your local public waste authorities (e.g. recycling centre). According to laws on the disposal of electronic and electrical devices, owners are obliged to dispose of old electronic and electrical devices in a separate waste container. The symbol indicates that the device must not be disposed of in normal domestic waste!



Batteries represent a hazard to health and the environment!



Never open, damage or swallow batteries or allow them to pollute the environment. They may contain toxic, ecologically hazardous heavy metals. You are legally obliged to dispose of power packs and batteries at the point of sale or in the corresponding containers provided at collection points by local public waste authorities.



Disposal is free of charge. The symbols indicate that the batteries must not be disposed of in normal domestic waste and that they must be brought to collection points provided by local public waste authorities.

Packaging materials must be disposed of according to local regulations.



Declaration of Conformity

This device fulfils the requirements stipulated in the EU directive: 1999/5/EU directive on radio equipment and telecommunications terminal equipment and the mutual recognition of their conformity.

Conformity with the above mentioned directive is confirmed by the CE mark on the device. To view the complete Declaration of Conformity, please refer to the free download available on our web site **www.amplicomms.com**

Maintenance

- Clean the housing surfaces with a soft, fluff-free cloth. Do not use any cleaning agents or solvents.

Guarantee

AMPLICOMMS equipment is produced and tested according to the latest production methods. The implementation of carefully chosen materials and highly developed technologies ensure trouble-free functioning and a long service life. The terms of guarantee do not apply when a device malfunction was caused by the mobile telecommunications network operator/provider. The terms of guarantee do not apply to the batteries or power packs used in the products. The period of guarantee is 24 months from the date of purchase.

All deficiencies related to material or manufacturing errors within the period of guarantee will be redressed free of charge. Rights to claims under the terms of guarantee are annulled following tampering by the purchaser or third parties.

Damage caused as a result of improper handling or operation, normal wear and tear, incorrect positioning or storage, improper connection or installation or Acts of Gods and other

external influences are excluded from the terms of guarantee. In the case of complaints, we reserve the right to repair defective parts, replace them or replace the entire device.

Replaced parts or devices become our property. Rights to compensation in the case of damage are excluded where there is no evidence of intent or gross negligence by the manufacturer.

If your device shows signs of defect during the period of guarantee, please return it to the sales outlet in which you purchased the AMPLICOMMS device together with the purchase receipt. All claims under the terms of guarantee in accordance with this agreement can only be asserted at the sales outlet.

No claims under the terms of guarantee can be asserted after a period of two years from the date of purchase and hand-over of the product.

Index

3-party conference 29

A

Alarm 63

Answer mode 48

Areas of use..... 71

Auto redial..... 47

B

Battery status 11

Block list..... 47

Bluetooth 55

C

Calculator..... 64

Calender..... 63

Call barring 46

Call center 42

Call divert..... 44

Call settings..... 44

Call time reminder 47

Call waiting 44

Calling 26

Calls list 27, 42

Change PIN 54

Charging the battery 10

Charging via the mini USB
charging socket..... 10

Creating a new phonebook
entry 31

D

Declaration of Conformity . 76

Dedicated key 52

Dialling a phone number.. 26

Direct number 51

Disposal 74

E

Emergency call 58

Emergency call procedure. 61

Emergency voice message 59

Ending a call 13

Entering text 24

F

Flight mode 53

G

Guarantee 77

H

Hands-free 28

I

Icons in the display 22

Installing the SIM card and
battery 8

Intended use 70

K

Keypad 50

L

Language 12, 52

M

Maintenance 76

Making a call 13

Memory status 30

Mini USB charging socket . 10

Multitap mode 24

N

Network settings 54

O

One-touch dialling . 26, 34, 51

Options whilst in a call 28

P

Phone lock 55

Phone settings 52

Phonebook 30

PIN lock 54

Pref. input method 52

Problems and solutions... 67

Profiles 49

Q

- Questions and Answers... 14
- Quick Start Guide 6

R

- Redial 27
- Rejecting a call 13
- Restore factory settings... 57
- Ringtone 49

S

- Safety Information 71
- Screen auto lock 55
- Security settings 54
- Service hotline 67
- Settings 49
- SMS centre number 38
- SMSC address 38
- SOS 58
- Special key functions 18
- Speed dialling 26
- Switching the mobile
phone on and off 11, 25

T

- Taking a call 13, 27
- Technical data 66
- Time and date 12, 52
- Tips on the battery 70
- Tone control 51
- Torch 20

U

- User profiles 49

V

- Voicemail server 39
- Volume 28
- Volume control 22

W

- What is in the box 8

Menu tree

Messages

- Write message*
- Inbox*
- Drafts*
- Outbox*
- Sent messages*
- SMS settings*
 - SIM
 - Save sent messages

Phonebook (Option)

- View
- Send text message
- Call
- Edit
- Delete
- Copy
- Add to block list
- Phonebook settings
 - Preferred storage*
 - Speed dial*
 - Extra numbers*
 - Fixed dial*
 - Human voice prompt*
 - Memory status*
 - Copy contacts*
 - Move contacts*
 - Delete all contacts*

Call center

Call history

- Missed calls
- Dialled calls
- Received calls
- Delete call logs

Call settings

- Call waiting
- Call divert
- Call barring
- Advance settings
 - Block list*
 - Auto redial*
 - Call time reminder*
 - Answer mode*

Settings

Profiles

Direct Number

Tone Control

Phone settings

- Time and date
- Language
- Pref. input methods
- Display
 - Show date and time*
- Dedicated key
- Flight mode

Backlight Setting

Main LCD backlight

Incoming And SMS LED

Charge LED

Network settings

Network selection

Security settings

SIM security

PIN lock

Change PIN

Change PIN2

Screen auto lock

Phone security

Phone lock

Change password

Bluetooth

Power


Visibility

My device

My name

Restore settings

SOS	<i>SOS mode setting</i> <i>Set SOS number</i> <i>Call center number</i> <i>Set outgoing voice MSG</i>
Tools	<i>Calendar</i> <i>Alarm</i> <i>Calculator</i>
Services	(depending on network provider)

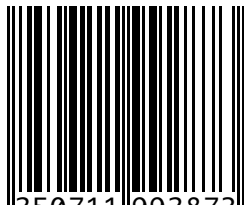

4 250711 992873



Audioline GmbH
D-41460 Neuss
07/2015 – Edition 1.1

